



SHOWER SYSTEM INSTALLATION




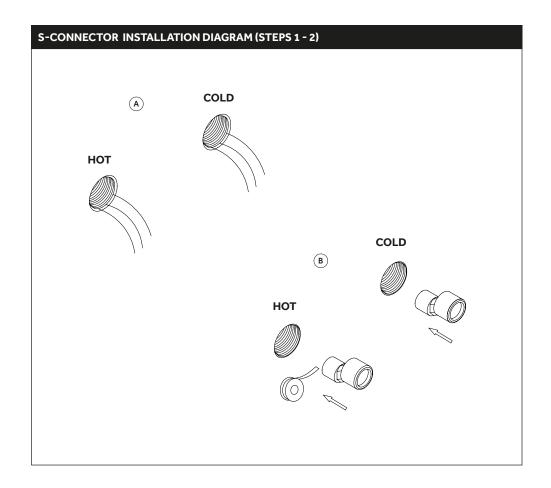


- 2. Rinse debris from pipes (A).
- 3. Wrap the G½ thread of the S-connector by PTFE tape, insert the S-connector into the hole in clockwise direction (B).

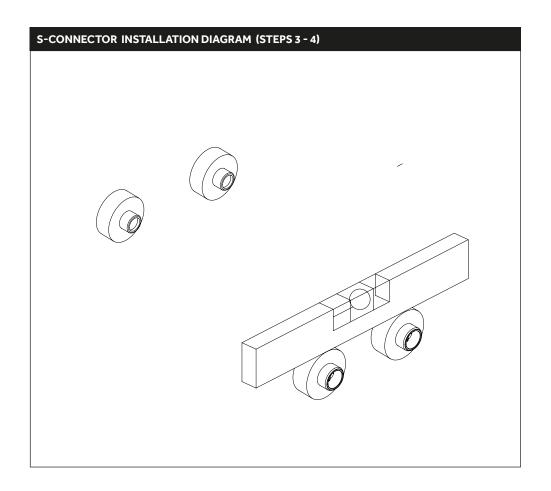


- 3. Install the wall flange to the S-connector in a clockwise direction.
- 4. Use the spirit level to make sure that it is horizontally level.

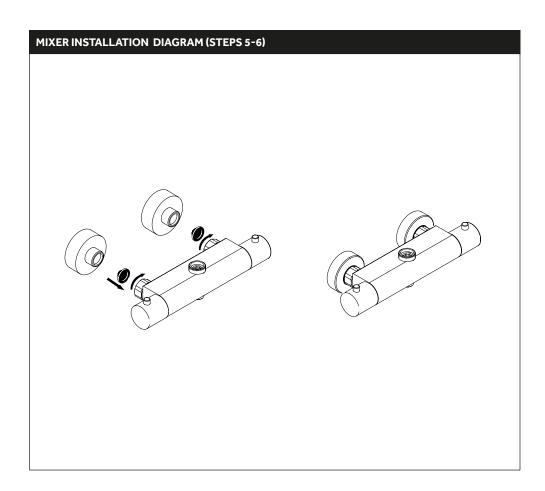


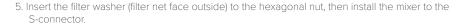



6. Finish the installation of the mixer.

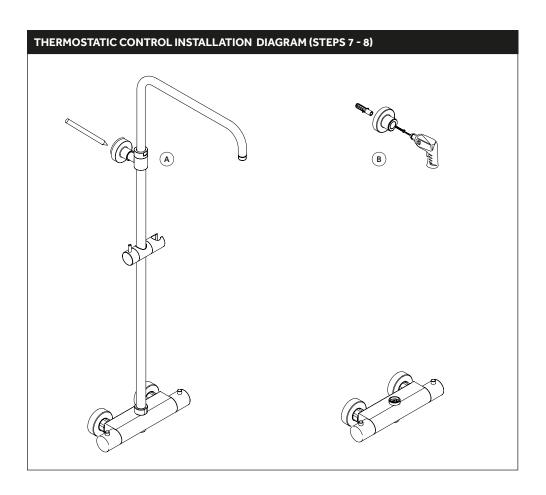


- 7. Offer the arm to the wall, marking where the flange sits (A).
- 8. Install the wall flange (B).

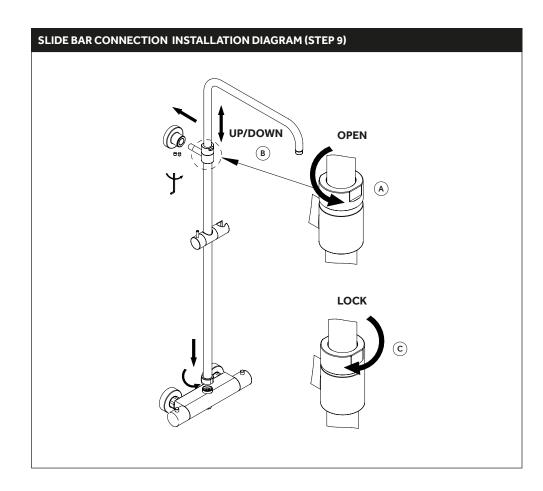

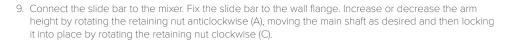

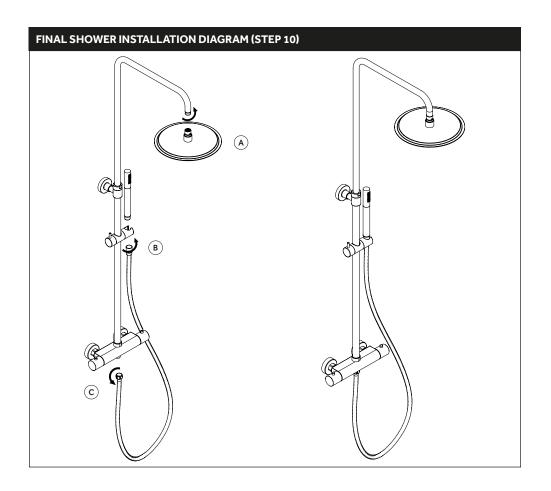


10. Install the shower head (A) to the slide bar, then install the hand shower (B) and shower hose (C) to the mixer as shown.

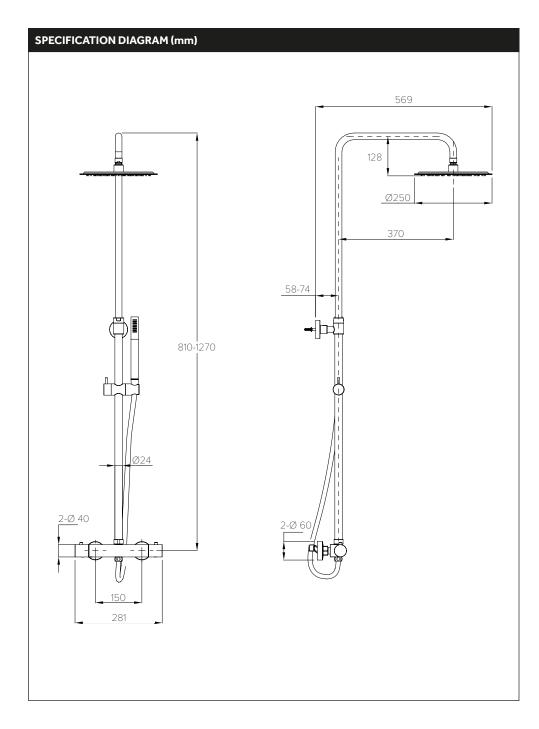

TYPICAL FLOW RATES

Flow rates shown are free-flowing and may vary subject to restrictions created by installation, pipework layout or application.

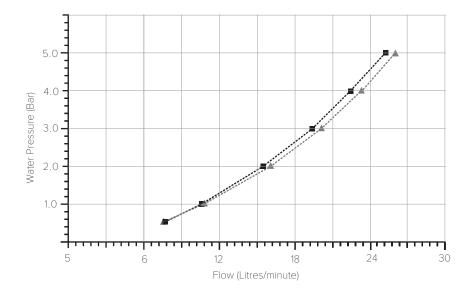

Water Pressure (Bar)	Outlet (Litres/minute)	Hand Shower (Litres/minute)
0.5	7.3	7.5
1.0	10.7	10.5
2.0	16.0	15.5
3.0	19.9	19.3
4.0	23.3	22.6
5.0	26.1	25.3



Whilst every effort is made to ensure the accuracy of these, they are subject to change without notice as part of the company's product development process. The use of trademarks, product design and artwork is subject to licence or agreement. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited.

The right to modify designs and dimensions is reserved. E & O.E.

COALBROOK