


# PULL OUT HANDSHOWER, HOSE AND HOLSTER INSTALLATION


# **DECK HANDSHOWER INSTALLATION DIAGRAM (STEPS 1 - 4)**

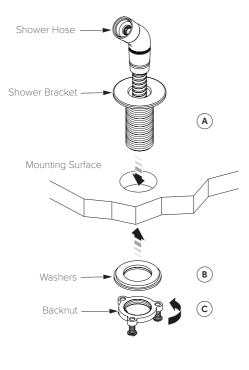

## COALBROOK


#### DECK HANDSHOWER INSTALLATION INSTRUCTIONS (STEPS 1 - 4)

- When necessary, drill a suitable size hole in the mounting surface to suit the threaded tail of the shower bracket (A) which is Ø29.
- 2. Pass the threaded tail of the shower bracket (A) through the hole in the mounting surface.
- 3. Locate both washers (B) onto the threaded tail. Ensure that the rubber washer is assembled first so that it comes into direct contact with the mounting surface.
- 4. Screw the backnut (C) onto the threaded tail, and tighten the shower bracket to the mounting surface using the three attached screws. Do not over tighten.

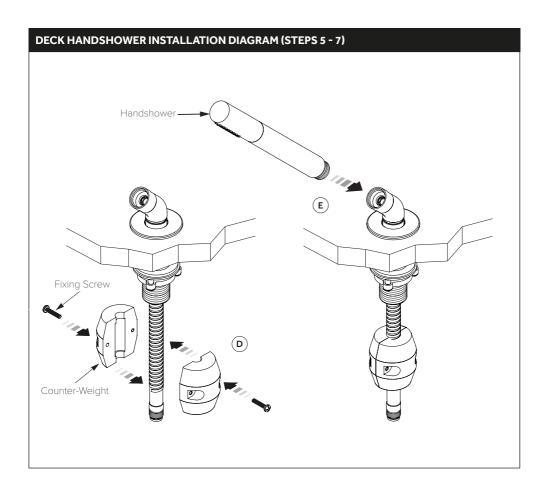

## **DECK HANDSHOWER INSTALLATION INSTRUCTIONS**

- 5. Locate the hose through the shower bracket. The angled holder should sit upright within the bracket.
- 6. Install the counter-weight 1/3 of the way up the hose (D). This can be completed by aligning the two halves around the hose and securing in place using the two provided screws.
- 7. To finalise the installation, screw the handshower into the angled bracket on the hose (E).

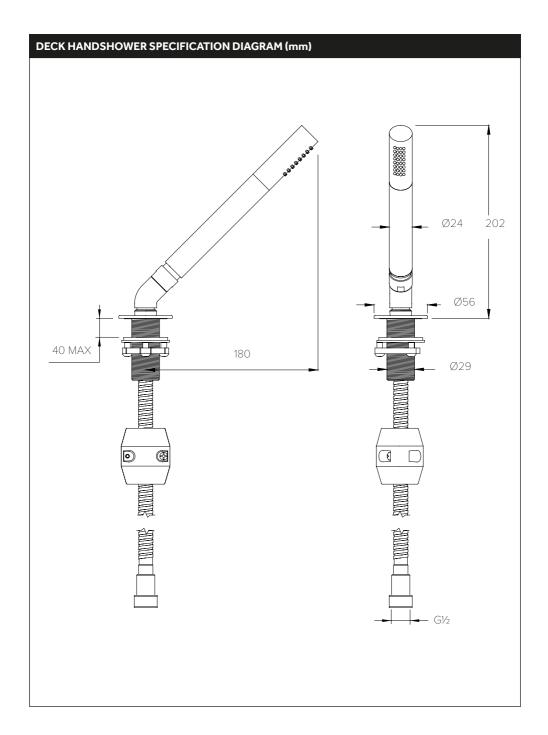

# COALBROOK



Whilst every effort is made to ensure the accuracy of these, they are subject to change without notice as part of the company's product development process. The use of trademarks, product design and artwork is subject to licence or agreement. The design registrations, trademark registrations and copyrights are protected by law and the use or reproduction outside the terms of an agreement is prohibited.

The right to modify designs and dimensions is reserved. E & O.E.

#### COALBROOK